

SERVICE

# FURUNO

## OPERATOR'S MANUAL

A-D CONVERTER

MODEL AD-10S



**FURUNO ELECTRIC CO., LTD.**  
NISHINOMIYA, JAPAN

## SPECIFICATIONS OF AD-10S A-D CONVERTER

### General

The A-D converter is a kind of gyrocompass repeater which indicates gyro-compass reading (i.e. ship's bearing) on 4 digit LED display, and converts gyro repeater signal into digital coded bearing data. The digital bearing data are used for navigation equipment such as satellite navigator, radar and so on.

### Specifications

1. Input Signal : Gyro repeater signal (Synchro or Step-by-step)  
(With simple change of jumper connection, various types of gyrocompass can be connected.)
2. Input Voltage : Synchro type --- AC28V to 135V (rotor)  
AC20V to 135V (stator)  
50/60Hz or 400/500Hz  
Power failure protector for instantaneous power-off. (Synchro type repeater only)  
Memory hold: approx. 5 sec.  
Step-by-step --- DC20 to 100V (For DC20 to 30V input, an external power supply of DC30 to 100V or AC60 to 125V is required.)

3. Power Consumption : Less than 14W

4. Tracking Speed :

		360X	90X/180X	36X	180X
SYNCHRO	50Hz	13°/sec	32°/sec	80°/sec	
	60Hz	16°/sec	40°/sec	100°/sec	
	400Hz	130°/sec	260°/sec	660°/sec	
	500Hz	160°/sec	320°/sec	800°/sec	
STEP-BY-STEP					30°/sec

5. Bearing Display : 4 digit LED display
6. Data Output : Photo-coupler driver type (open collector),  
4 digit BCD (16 bit serial) code, MSB transmission order.
7. Output Lines : Two output lines for radar north-up unit (RG-2/2A) and two other lines for satellite navigation system, doppler sonar current indicator or color scanning sonar, etc.
8. Data Transmission Interval : Approx. 25msec for radar north-up unit  
Approx. 200msec for other equipments
9. Coating Color : Cabinet Cover --- 2.5GY5/1.5 Newtone No.5  
Front Panel ----- N3.0 Dark gray mat

**FURUNO**Complete Set

<u>No.</u>	<u>Name</u>	<u>Type</u>	<u>Code No.</u>	<u>Q'ty</u>	<u>Weight</u>	<u>Remarks</u>
1	A-D Converter	AD-10S	000-044-115	1	2.5Kg	With mounting bracket
2	Installation Materials	AD-10S-C	000-044-116	1 set		
3	Spare Parts	AD-10S-S	000-044-117	1 set		

Installation Materials

<u>No.</u>	<u>Name</u>	<u>Type</u>	<u>Code No.</u>	<u>Q'ty</u>	<u>Remarks</u>
1	Crimp-on Lug	FV1.25 M3	000-538-110	24	
2	Woodscrew	4.8x25 C2700W MBNI2	000-861-717	4	
3	Flat Washer	M5 C2600P MBNI2	000-864-108	4	
4	CAPACITOR	ECQ-M1H104KV	000-260-401	3	

Spare Parts

<u>No.</u>	<u>Name</u>	<u>Type</u>	<u>Code No.</u>	<u>Q'ty</u>	<u>Remarks</u>
1	Fuse	FGB0-A 1A	000-549-061	4	

**FURUNO**MAINTENANCEReplacement of Fuse

- 1) Take off the top cover by loosening six screws.
- 2) Disconnect two connectors connected to A-D converter board.
- 3) Remove the shield plate (with A-D converter board) by loosening six screws and replace blown fuse with new one.

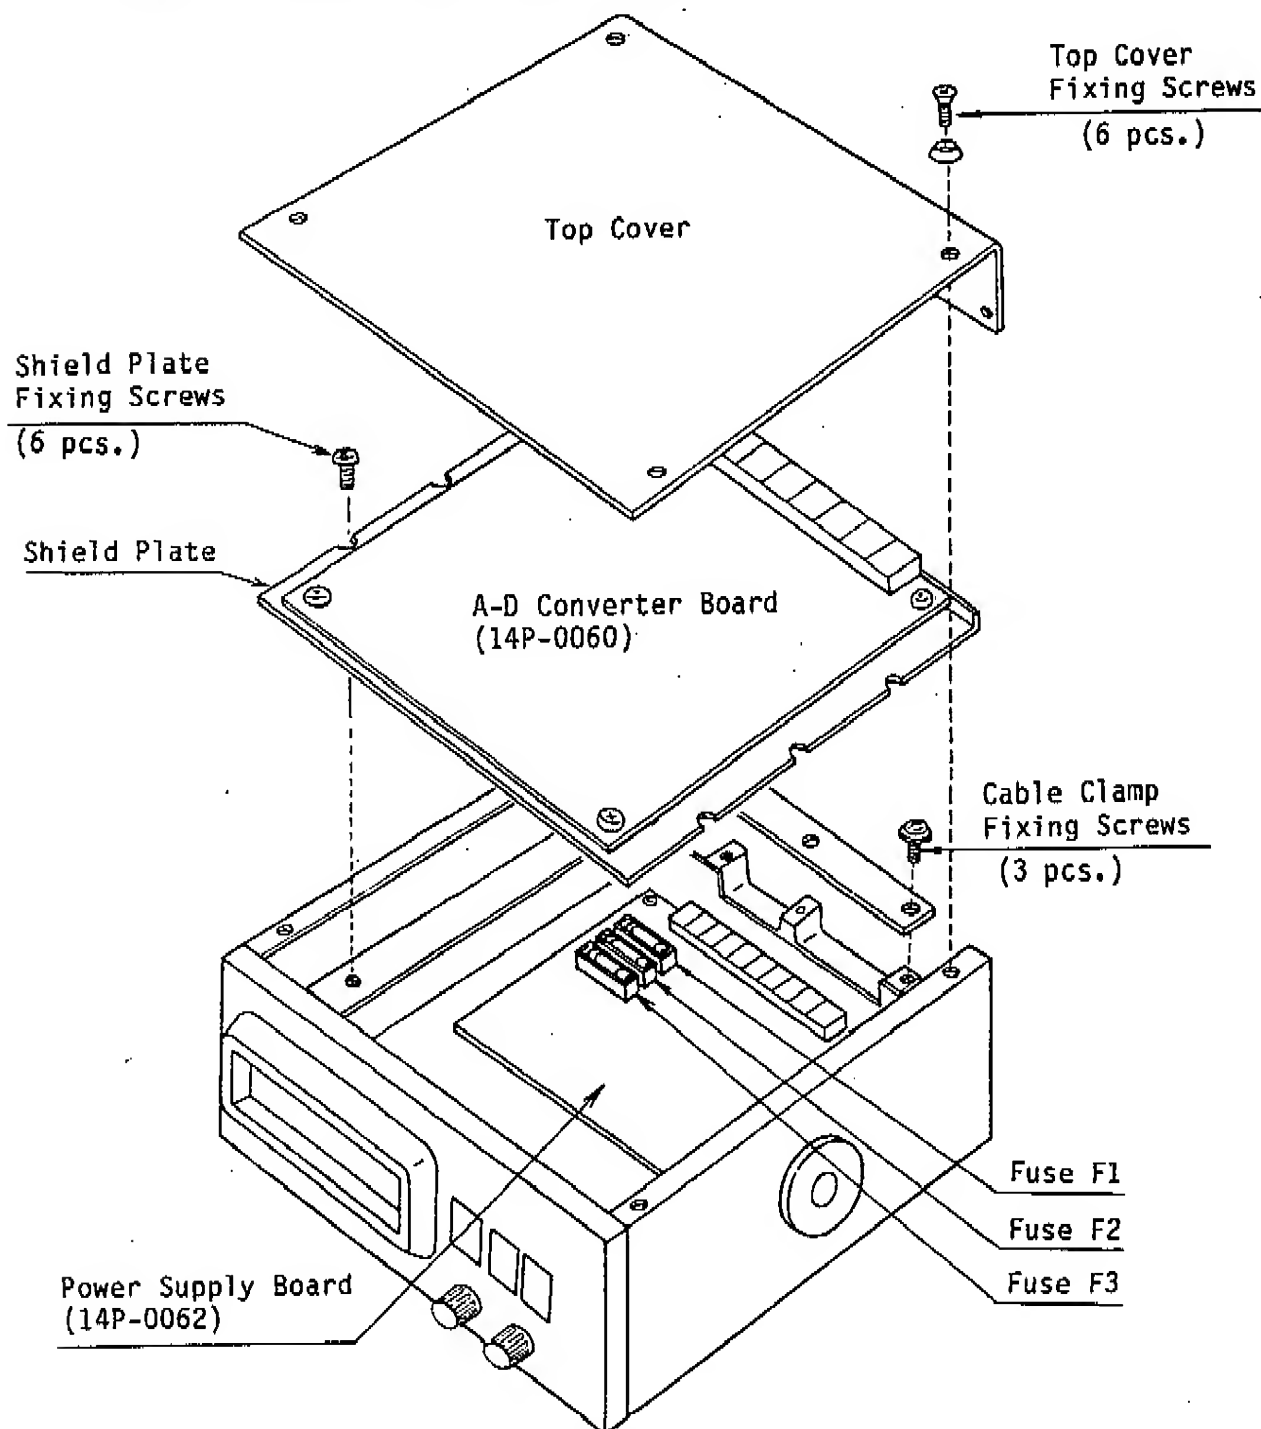


Fig.2 A-D Converter Exploded View

**FUKUNO**

## APPENDIX 1. INSTALLATION INSTRUCTIONS

## 1. Modifications at Installation

Some modifications are required for A-D converter so as to be combined with different types of gyrocompass repeater signal.  
Check the following items for gyrocompass.

1) Type of repeater signal : AC synchro signal or DC step-by-step pulse?

2) If it is synchro type;

Primary voltage (rotor) : AC \_\_\_\_\_ V  
Secondary voltage (stator) : AC \_\_\_\_\_ V  
Frequency : 50/60Hz or 400/500Hz?  
Gear ratio : 360X, 180X, 90X or 36X?

3) If it is step-by-step type;

Repeater driving circuit : DC on-off pulse with 4 output lines or open collector transistor drive system with 5 output lines?  
Operating voltage : DC \_\_\_\_\_ V  
Gear ratio : 180X?  
Common line level with respect to other terminal's level : Positive or negative?

The A-D converter is previously set up at the factory for the following specifications. If different specifications are required, reset the DIP switch on A-D converter board 14P-0060 and change jumper connection on that board and power supply board 14P-0062 referring to the instruction affixed on the inner face of the top cover and one mentioned below.

Setting at Factory

- 1) Synchro type repeater signal
- 2) Primary and secondary voltages are higher than 60V
- 3) Frequency is 50Hz/60Hz
- 4) Gear ratio is 90X





# FURUNO

MODIFICATION ON POWER SUPPLY/A-D CONVERTER BOARDS  
DEPENDING ON TYPE OF GYROCOMPASS. (SEE PAGE AP1-4.)

(When combining with gyrocompass other than  
listed below, refer to page AP1-3.)

## AC Synchro Type


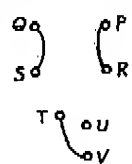

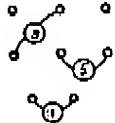
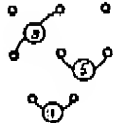
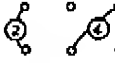
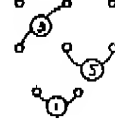
- \*1: Mod. depending on input voltage.
- \*2: Mod. depending on gyro repeater signal.
- \*3: Mod. depending on gyro repeater signal and frequency.
- \*4: Mod. depending on gyro repeater signal, frequency and gyro ratio.

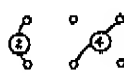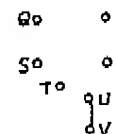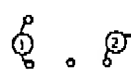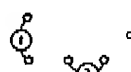Gyrocompass and Manufacturer	Gyro signal (Gyro ratio)	Modification on POWER SUPPLY board (14P-0062)		Modification on A-D CONVERTER board (14P-0060)									
		Jumper wire connection (*1)	Jumper wire terminal (*2)	Jumper wire connection (*3)	DIP switch setting (*4)								
ANSCHUTS: STANDARD 1 to 6 HOKUSHIN-PLATH: A,B-55, C-1, C-1A, C-2, C-3 PLATH: NAVIGAT II and III MICROTECNICA LK-2, MB-12, MV-58	50/60VAC 50/60Hz (x 360)	  (Jumper wire (1) not connected. Factory setting)	  (Factory setting)	  (Factory set.)	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td></tr><tr><td>ON</td><td>OFF</td><td>ON</td><td>OFF</td></tr></table>	1	2	3	4	ON	OFF	ON	OFF
1	2	3	4										
ON	OFF	ON	OFF										
HOKUSHIN PLATH: CMZ-100, CMZ-200, C-Jr, D-1Z	100VAC 50/60Hz (x 360)				<table><tr><td>1</td><td>2</td><td>3</td><td>4</td></tr><tr><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td></tr></table>	1	2	3	4	OFF	OFF	OFF	OFF
1	2				3	4							
OFF	OFF				OFF	OFF							
MICROTECNICA: SIRIUS	115VAC (x 360)												
TOKYO KEIKI-SPERRY: ES-1, ES-2, ES-11 GLT-101/102/103/106K	110VAC 60Hz (x 36)												
TOKYO KEIKI-SPERRY: ES-11A, TG-200, PR222R, PR237L,H	110VAC 60Hz (x 90)												
USSR MAKE: BEGA, KURS-4, AMUR-3	110VAC 50Hz (x 360)				<table><tr><td>1</td><td>2</td><td>3</td><td>4</td></tr><tr><td>ON</td><td>OFF</td><td>ON</td><td>OFF</td></tr></table>	1	2	3	4	ON	OFF	ON	OFF
1	2	3	4										
ON	OFF	ON	OFF										
USSR MAKE: AMUR-M	110VAC 500Hz (x 360)				<table><tr><td>1</td><td>2</td><td>3</td><td>4</td></tr><tr><td>ON</td><td>ON</td><td>ON</td><td>OFF</td></tr></table>	1	2	3	4	ON	ON	ON	OFF
1	2	3	4										
ON	ON	ON	OFF										

Note: 1. For the synchro repeater signal of 50/60Hz, 180X, cut the copper foil and connect jumper wires on A-D CONVERTER board (14P0060) as shown on the page AP1-5.

DC Step-by-step Type

- \*1: Mod. depending on input voltage.  
 \*2: Mod. depending on gyro repeater signal.  
 \*3: Mod. depending on gyro repeater signal and frequency.  
 \*4: Mod. depending on gyro repeater signal, frequency and gyro ratio.

Gyrocompass and Manufacturer	Gyro signal (Gyro ratio)	Modification on POWER SUPPLY board (14P-0062)		Modification on A-D CONVERTER board (14P-0060)									
		Jumper wire connection (*1)	Jumper wire terminal (*2)	Jumper wire connection (*3)	Dip switch setting (*4)								
TOKYO KEIKI-SPERRY: MK-14 MOD-1, MK-14 MOD-2, MK-14 MOD-T, MK-EN, MK-EI	70VDC, 3 wires (+) and common line (x 180)			 (Jumper wires (1) & (3) not connected.)	<table border="1"><tr><td>1</td><td>2</td><td>3</td><td>4</td></tr><tr><td>ON</td><td>ON</td><td>ON</td><td>ON</td></tr></table>	1	2	3	4	ON	ON	ON	ON
1	2	3	4										
ON	ON	ON	ON										
TOKYO KEIKI-SPERRY: SR-130	70VDC 5 wires open collector coupling (x 180)	(Jumper wire (1) not connected. Factory set.)											
TOKYO KEIKI: TG-100, TG-5000	70VDC 3 wires (-) and common line (x 180)												
TOKYO KEIKI-SPERRY: SR-120, ES-16, MK-20 ROBERTSON: SKR-80	35VDC 3 wires (-) and common line (x 180)												
SPERRY (Note 2): MK-37, MOD-1	35V pulsating voltage, with 5 wires of open collec- tor coupling (x 180)												
SPERRY (Note 2): MK-120	70V pulsating voltage, with 5 wires of open collec- tor coupling (x 180)	 (Jumper wire (1) not connected. Factory set.)											
ARMABROWN: MK-10	50VDC 3 wires (-) and common line (x 180)												

Note: 1. When the step voltage is too low to make A-D converter operative, use external power supply for AD-10S and remove all jumper wires, that is, between (U)-(V), (P)-(R), (Q)-(S) and (T)-(V).


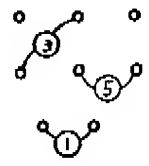
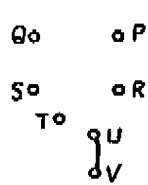
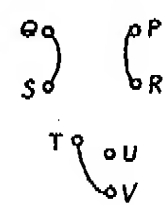
2. When combining with step-by-step gyrocompass whose repeater signal employs a pulsating current rectified in half-wave or full wave, put three capacitors (0.1uF, 50V) supplied as installation materials in parallel with C10, C11 and C12 respectively on POWER board (14P-0062). See page AP1-4. Use 0.33uF instead of 0.1uF if not enough.

3. The capacitors C1 to C3 and C7 to C12 are not used for combining with GY-700.



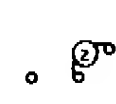
# FURUNO

When combining with gyrocompass other than listed on pages AP1-2/1-3, refer to the following.

## Modification of POWER SUPPLY board (14P-0062)

	Input Voltage	
	Higher than AC45V (DC50V)	AC45V (DC50V) or lower than that
Jumper wire connections (1) to (5)	 <p>(Factory setting.)</p>	
Jumper wire terminals	AC synchro repeater signal	DC step-by-step repeater signal
		

## Modification of A-D CONVERTER board (14P-0060)


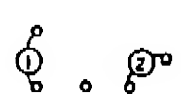
	AC synchro repeater signal		DC step-by-step repeater signal
	50/60Hz	400/500Hz	
Jumper wire connections (1) to (3)	 <p>(Factory setting.)</p>		 <p>(Cut the jumper wire (1).)</p>

Note: Change DIP switch setting depending on the type of gyro repeater signal, frequency and gyro ratio.

		SYNCHRO 50/60Hz			SYNCHRO 400/500Hz			STEP-BY-STEP
		360X	90X/180X	36X	360X	90X/180X	36X	180X
SETTING OF DIP SWITCH S1	1	ON	ON	OFF	ON	ON	OFF	ON
	2	OFF	OFF	OFF	ON	ON	ON	ON
	3	ON	OFF	OFF	ON	OFF	OFF	ON
	4	OFF	OFF	OFF	OFF	OFF	OFF	ON

↑  
Factory setting



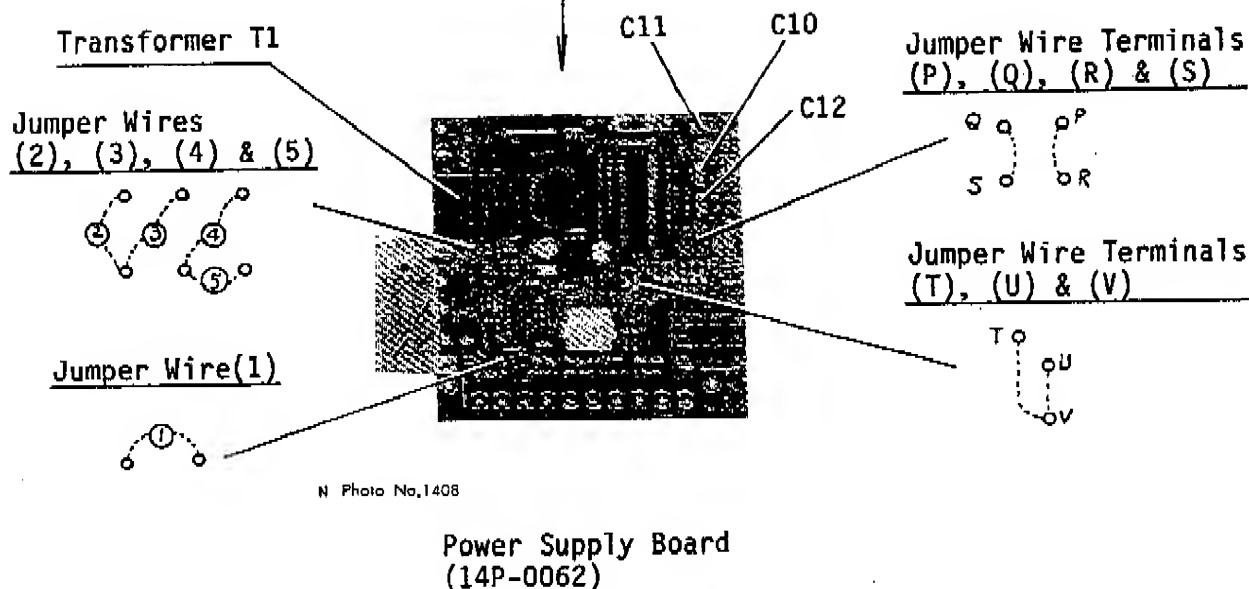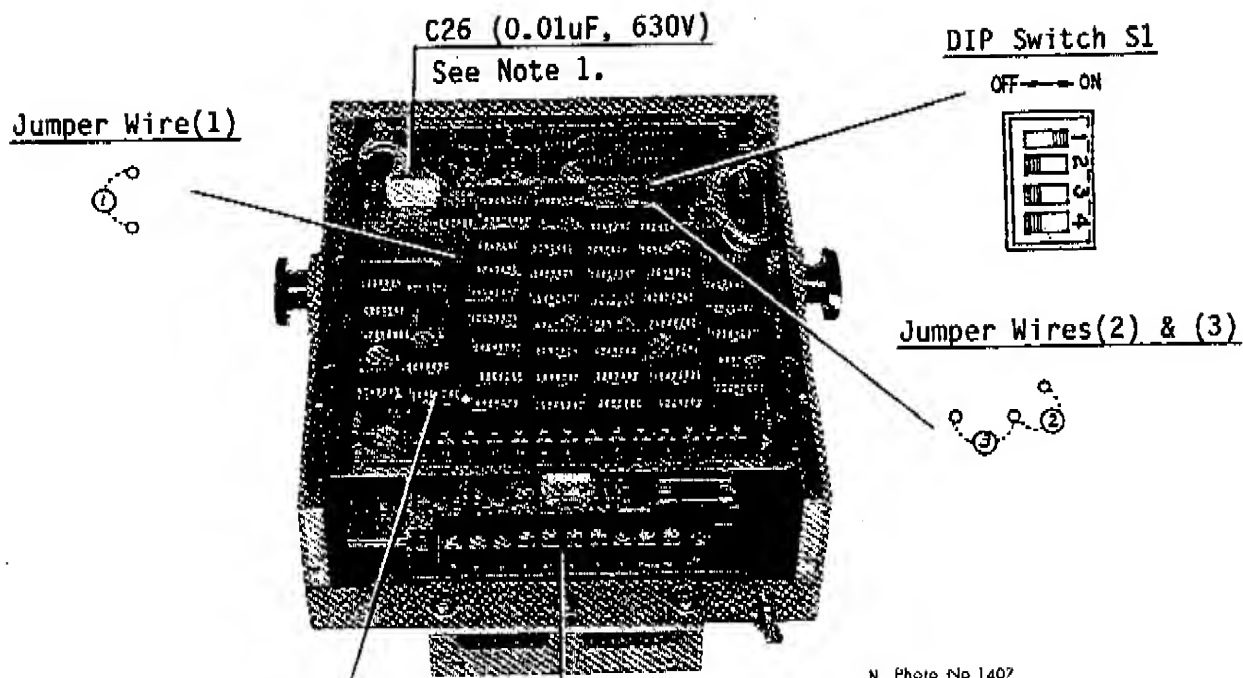


Note: 1. When A-D converter is combined with some kinds of gyrocompass, the capacitance of C26 (0.01uF, 630V) on the A-D converter board used as a noise filter may not be enough to operate the converter in good order. To solve this problem, change the capacitance of C26. (Minimum value is 0.001uF/400V.)



# FURUNO

For the synchro repeater signal of 50/60Hz, 180X,  
modify the A-D converter board as below.

(Parts Side)

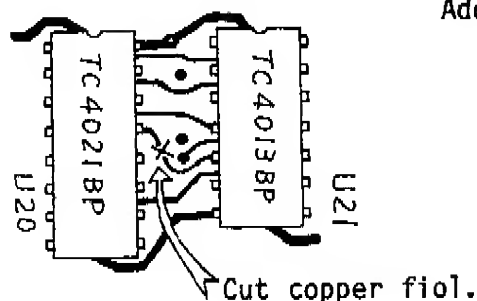

(Soldering Side)

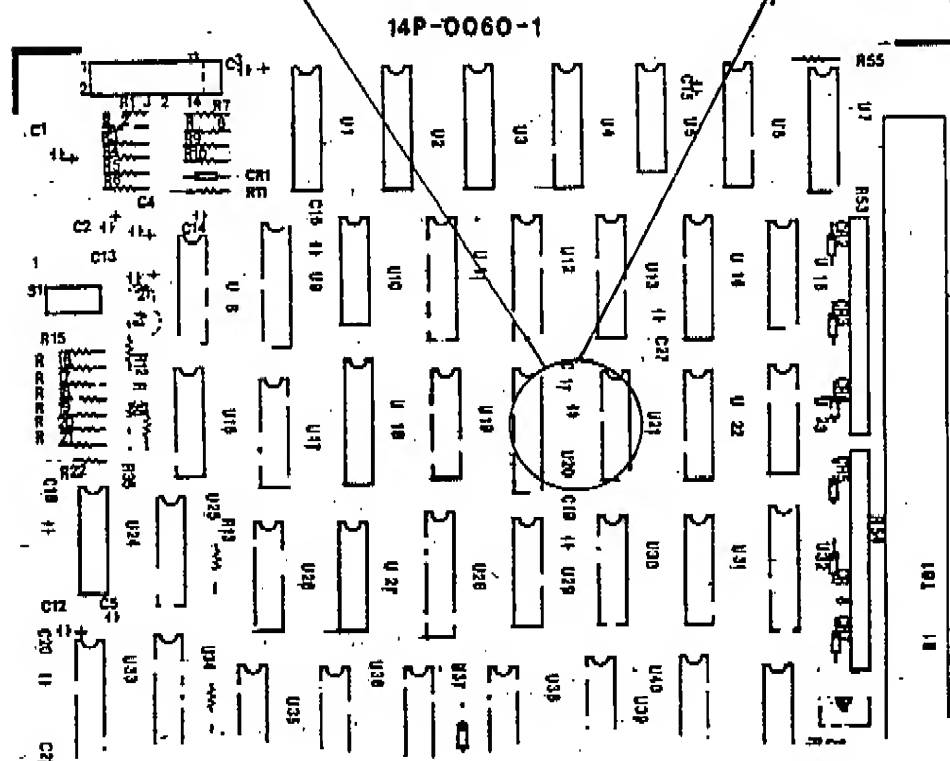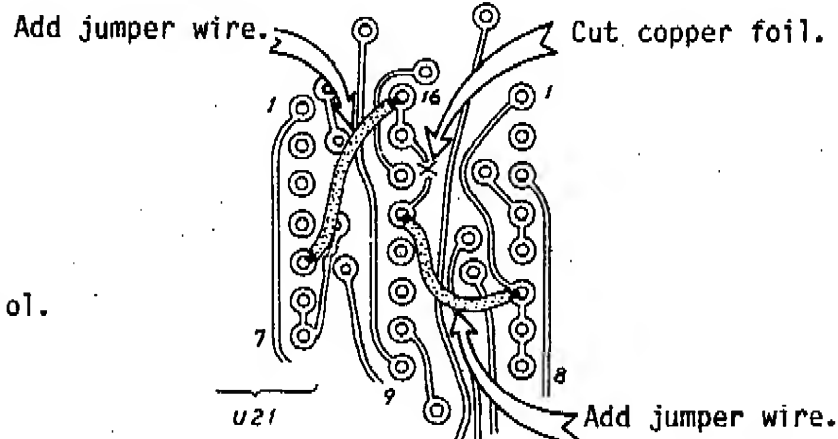

A-D Converter Board (14P-0060)

## 2. Mounting

When siting the A-D converter, select a well ventilated waterproof place where the initial setting of the bearing can be made with observing gyrocompass reading. The bearing display of the A-D converter should not be in the direct path of bright sunshine or overhead lighting.

Cable length to the radar north-up unit, satellite navigation system, doppler sonar current indicator or scanning sonar steady picture display, etc. (max. 10m) must be taken into account.

The A-D converter is supplied with a bracket for tabletop or overhead mounting. See outline drawing C4280-001 on page D-1.


- 1) Separate the bracket from the main body by loosening two bracket fixing knobs.
- 2) Install the bracket on the selected place by fixing it with four woodscrews ( $\phi 4.8 \times 25$ ) and washers supplied. For the overhead mounting, use hex. bolts, nuts and washers instead of woodscrews.
- 3) Mount the main body on the bracket.

## 3. Wiring

For the connection between A-D converter and gyrocompass, 5C cable (250V-MPYCS-5 or equivalent) is required. For the connection between A-D converter and radar north-up unit, satellite navigation system, doppler sonar current indicator or scanning sonar steady picture display, etc. CO-SPEVV-SB-C 0.2sq, 5P cable is optionally supplied together with the latter equipment.

Connect the A-D converter to the gyrocompass and the navigational equipments referring to interconnection diagram C4248-007 on page S-1.


Note: When the step voltage is less than 30V, connect A-D converter to the external power supply as below.

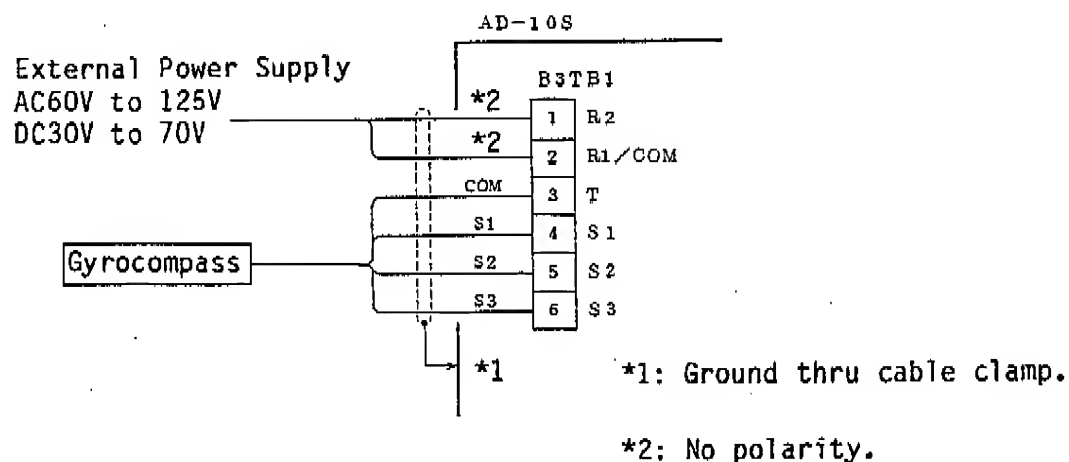

**FURUNO****- Fabrication of 5C Cable -**

- 1) Cut the cable to the appropriate length.
- 2) Cut off the armor and sheath for approx. 120mm from the end of the cable.
- 3) Comb out the cores from the braided shield.
- 4) Cut the shield leaving 10mm and solder it with earth wire.
- 5) Dress the end of armor, sheath and shield with vinyl tape.
- 6) Fit crimp-on lugs on each end of the core and earth wire.

Note: Ground the armor thru the cable clamp.

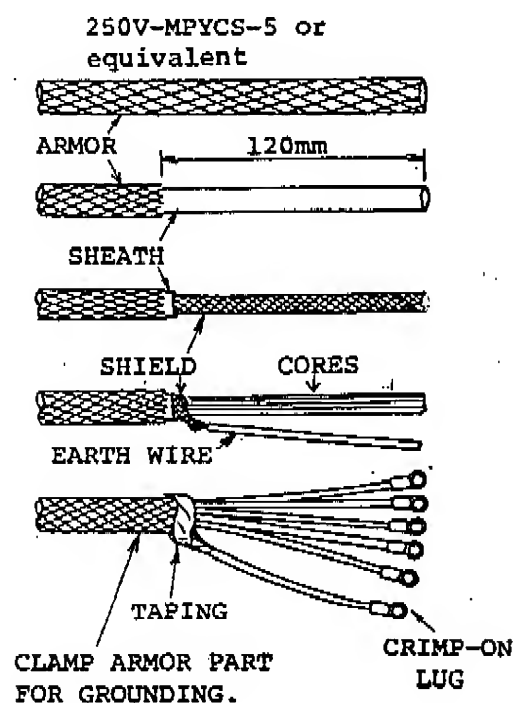


- Fabrication of CO-SPEVV-SB-C, 0.2sq. 5P Cable -

- 1) Cut the cable to the appropriate length.
- 2) Remove vinyl sheath for the length shown in the drawing with care not to cut armor.
- 3) Cut the armor leaving 40mm long and fold back it over the sheath.
- 4) Remove inner sheath with care not to cut braided shield.
- 5) Comb out cores from the shield with care not to untwist each pair of cores.
- 6) Fold back the braided shield over the armor and cut it for the same length as armor remaining.
- 7) Dress the ends of armor and braided shield with vinyl tape.
- 8) Fit the crimp-on lugs on each end of cores as shown below.


Note: Ground the armor and shield through cable clamp.

FABRICATION OF  
CABLE AT RADAR  
NORTH-UP UNIT  
SIDE.

CONNECTOR PLUG  
IS PREVIOUSLY  
FITTED AT THIS  
END FOR SATEL-  
LITE NAVIGATION  
SYSTEM, DOPPLER  
SONAR CURRENT  
INDICATOR AND  
SCANNING SONAR  
STEADY PICTURE  
DISPLAY

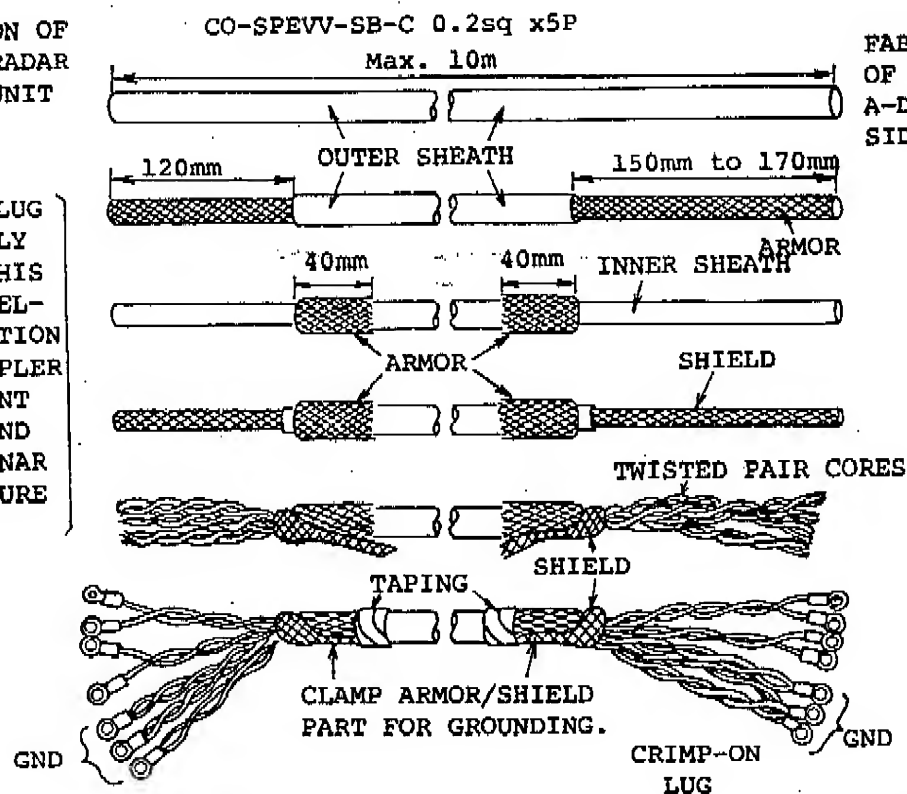

FABRICATION  
OF CABLE AT  
A-D CONVERTER  
SIDE.

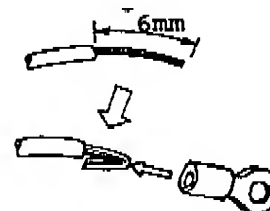

**FURUNO**

## APPENDIX 2. INTERCHANGEABILITY BETWEEN PCBs OF AD-10S AND AD-10

## 1. A-D Converter Board (Ref. to page AP2-2.)

AD-10SAD-10

14P-0060 —————&gt; 13P-5019

The A-D converter board (14P-0060) of AD-10S can be used in AD-10 as well if the following modification is made on 14P-0060 board.  
(It is also possible to use the A-D converter board of AD-10 in AD-10S by reversing the following modification.)

- (1) Remove jumper wires connected at the positions of R37, R40 and R43, and put the carbon resistors (150K ohms, 1/4W) at these positions.

## 2. Power Supply Board (Ref. to page AP2-2.)

AD-10SAD-10

14P-0062 —————&gt; 13P-5020

The power supply board (14P-0062) of AD-10S can be used in AD-10 as well if the following modification is made on 14P-0062 board.  
(It is also possible to use the power supply board of AD-10 in AD-10S by reversing the following modification.)

- (1) Remove the resistors R4, R5 and R6 (150K ohms x 3) and connect jumper wires at the respective positions.
- (2) Remove the resistors R7, R8 and R9 (22K ohms x 3).

## 3. Display Board (AD-10S: 14P-0061, AD-10: 13P-5021)

The display board is not interchangeable each other.

Note: When both the A-D converter and power supply boards are changed at the same time (AD-10S ↔ AD-10), the above modification is not required.



A-D コンバータ  
A-D CONVERTER  
AD-10/10S


(ツイストペア)  
TWISTED PAIR

No.1 レーダー 真方位表示装置  
No.1 RADAR NORTH-UP UNIT  
RG-2/2A

下記機種にも接続可能  
各々の相互接続図参照  
CAN ALSO BE COMBINED  
WITH THE FOLLOWING  
EQUIPMENTS.  
REFER TO INDIVIDUAL  
INTERCONNECTION  
DIAGRAM.


NOTE: ( )内の端子台  
番号はAD-10S用。  
TERMINAL BOARD  
NUMBER IN ( )  
FOR AD-10S.

CC 1-BK  
CH 2-R  
DC 3-GK  
DH 4-White

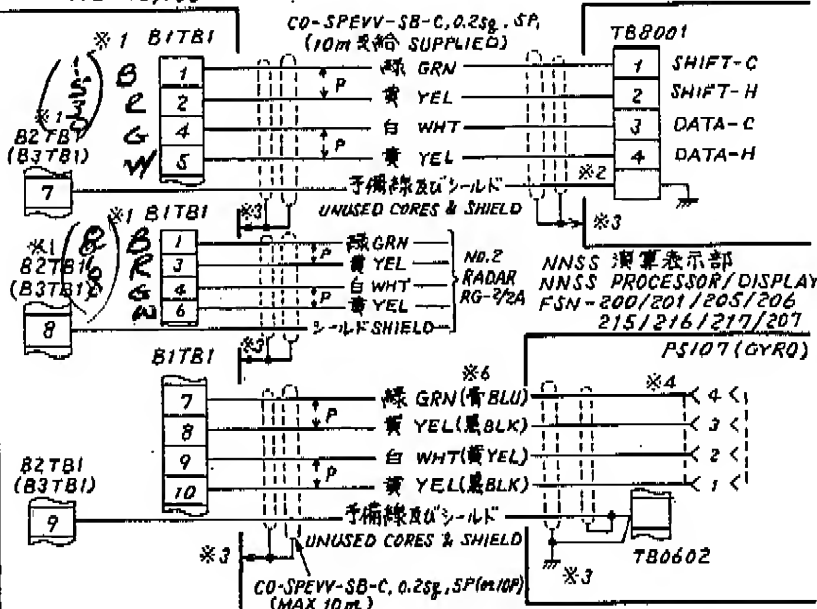

BITBI #1  
#6  
FR-800D  
FCR-1400  
SERIES  
CD-140/  
CD-141

BITBI #7  
#10  
FSN-70

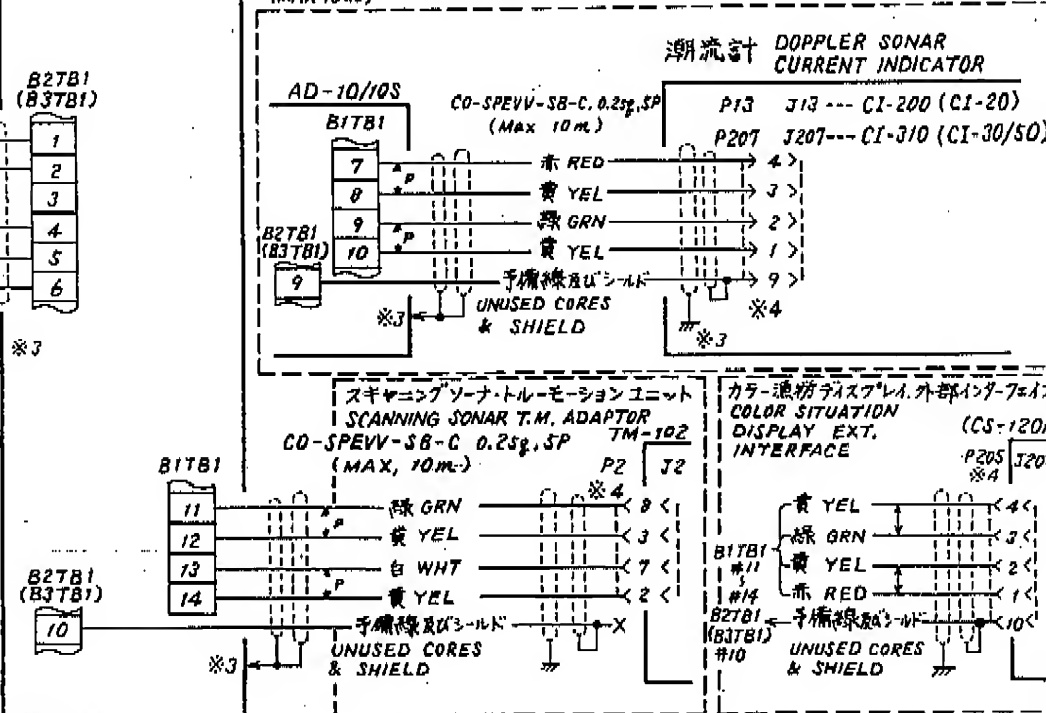


NOTE: ※1. No.1 レーダーは、#1, #2, #4, #5, #7 に、No.2 レーダーは #1, #3, #4, #6, #8 にそれぞれ接続。  
No.1 RADAR IS CONNECTED TO #1, #2, #4, #5, #7, AND No.2 RADAR TO #1, #3, #4, #6, #8 RESPECTIVELY.  
※2. 端子台をメネジでアースに落とす。GROUND THRU TERMINAL BOARD FIXING SCREWS.  
※3. ケーブルクランプでアースに落とす。GROUND THRU CABLE CLAMP.  
※4. 出荷時ケーブルにはコネクタ取付済。CONNECTOR PLUG PREVIOUSLY FITTED TO CABLE AT FACTORY.  
※5. 造船所支給。SHIPYARD SUPPLY.  
※6. ( )内のカラーコードは10Pケーブル使用の場合。COLOR CODES IN ( ) ARE THOSE FOR 10P CABLE.

品番 ITEM	品名 NAME	材質 MATERIAL	数量 Q'TY	図番 DWG.NO.	摘要 REMARKS
承認 APPROVED	三角法 THIRD ANGLE PROJECTION	名称 TITLE			
検図 CHECKED	尺度 SCALE				
製図 DRAWN	重量 WEIGHT	kg			

名称  
TITLE  
A-Dコンバータ相互結線図  
AD-10  
AD-10S A-D CONVERTER  
図番  
DWG.NO.  
C4248-007-H




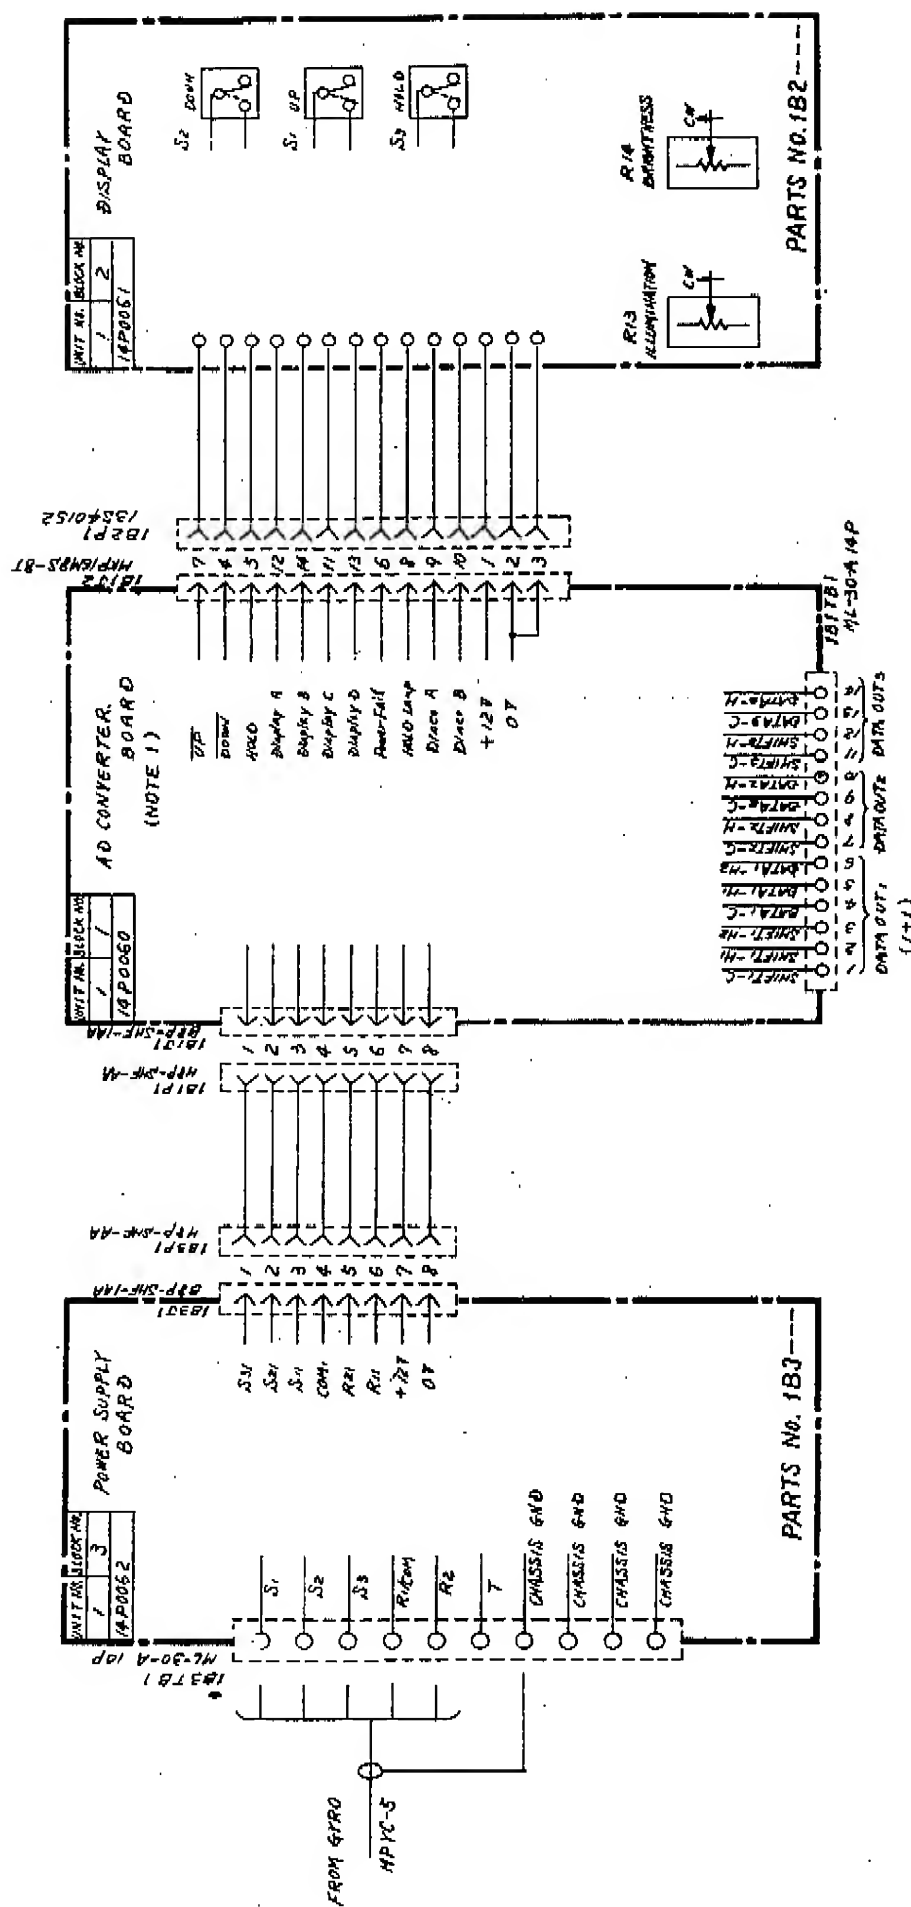

NOTE 1. A-D コンバータ-基板の回路図は非公開。  
SCHEMATIC DIAGRAM FOR A-D CONVERTER  
BOARD IS NOT PUBLISHED.

品名 ITEM	品名 NAME	数量 QTY	材料 MATERIAL	图号 DWG. NO.	备注 REMARK
提出 APPROVED	三视图 THIRD ANGLE PROJECTION		名称 TITLE		
检查 CHECKED	比例 SCALE		AD-10S		
制图 DRAWN	重量 WEIGHT		AD-10S A-D CONVERTER		

**FURUNO ELECTRIC CO., LTD.**

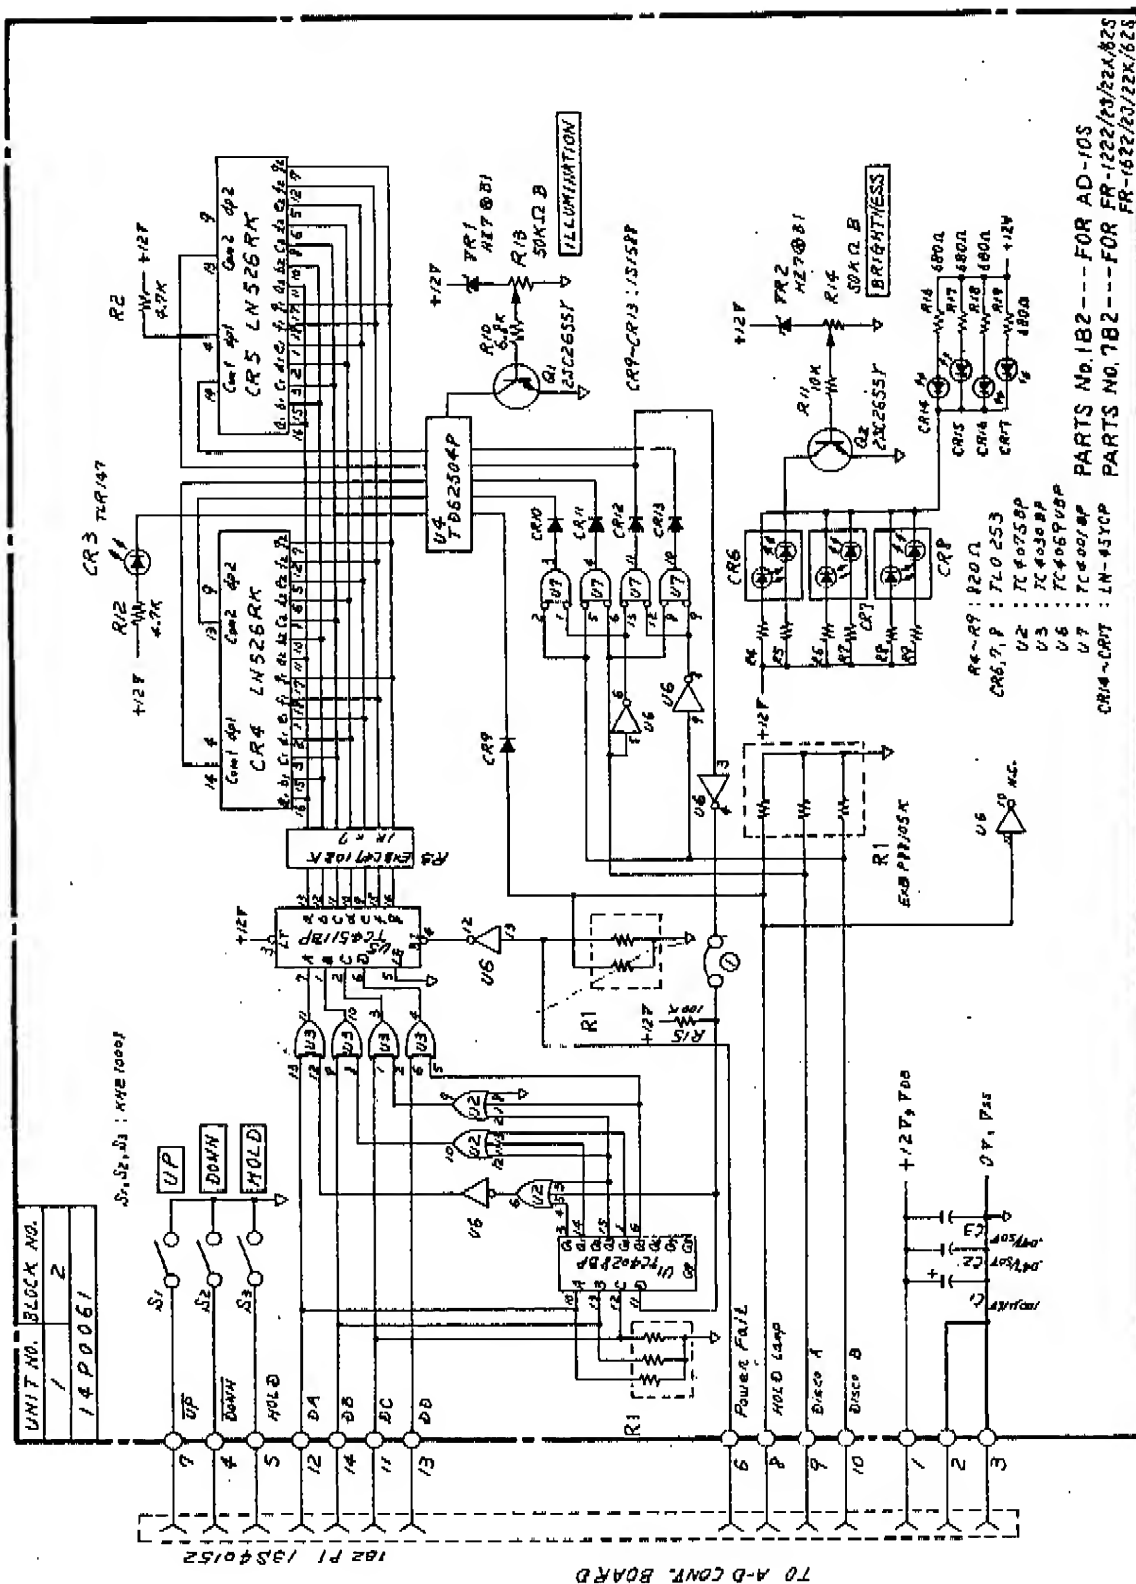

06 : 17400102  
 07 : 7C60010P  
 CR4~CR7 : LN-45YCP  
 PARTS No.1B2----FOR AD-10S  
 PARTS No.7B2----FOR FR-1222/19/23/4/6/2S  
 PARTS No.7B2----FOR FR-1632/13/22K/16/2S

NOTE 1. 特記なき抵抗の単位は全て  $\Omega$ ,  $1/4W$  スコンデンサ - は  $\mu F$ .  
ALL RESISTANCE IN OHMS,  $1/4W$  AND CAPACITANCE  
IN MICROFARADS UNLESS NOTED OTHERWISE.

品名 ITEM	品名 NAME	材料 MATERIAL	数量 QTY	图号 DWG NO.	数量 REMARKS
三 THIRD	角 ANGLE	投影法 PROJECTION	各 TITLE		
图 SCALE	图 SCALE	图 SCALE	图 SCALE		
重量 WEIGHT	重量 WEIGHT	重量 WEIGHT	重量 WEIGHT		
图 DRAWN	图 DRAWN	图 DRAWN	图 DRAWN		
图 CHECKED	图 CHECKED	图 CHECKED	图 CHECKED		
图 APPROVED	图 APPROVED	图 APPROVED	图 APPROVED		
表示基板回路图 DISPLAY BOARD					
14P0061					
C4280-007-D					

AD-105  
FR-1222/23/22X/62S, FR-1622/23/22X/62S

**FURUNO ELECTRIC CO., LTD.**




**FURUNO**

2

3

D 1

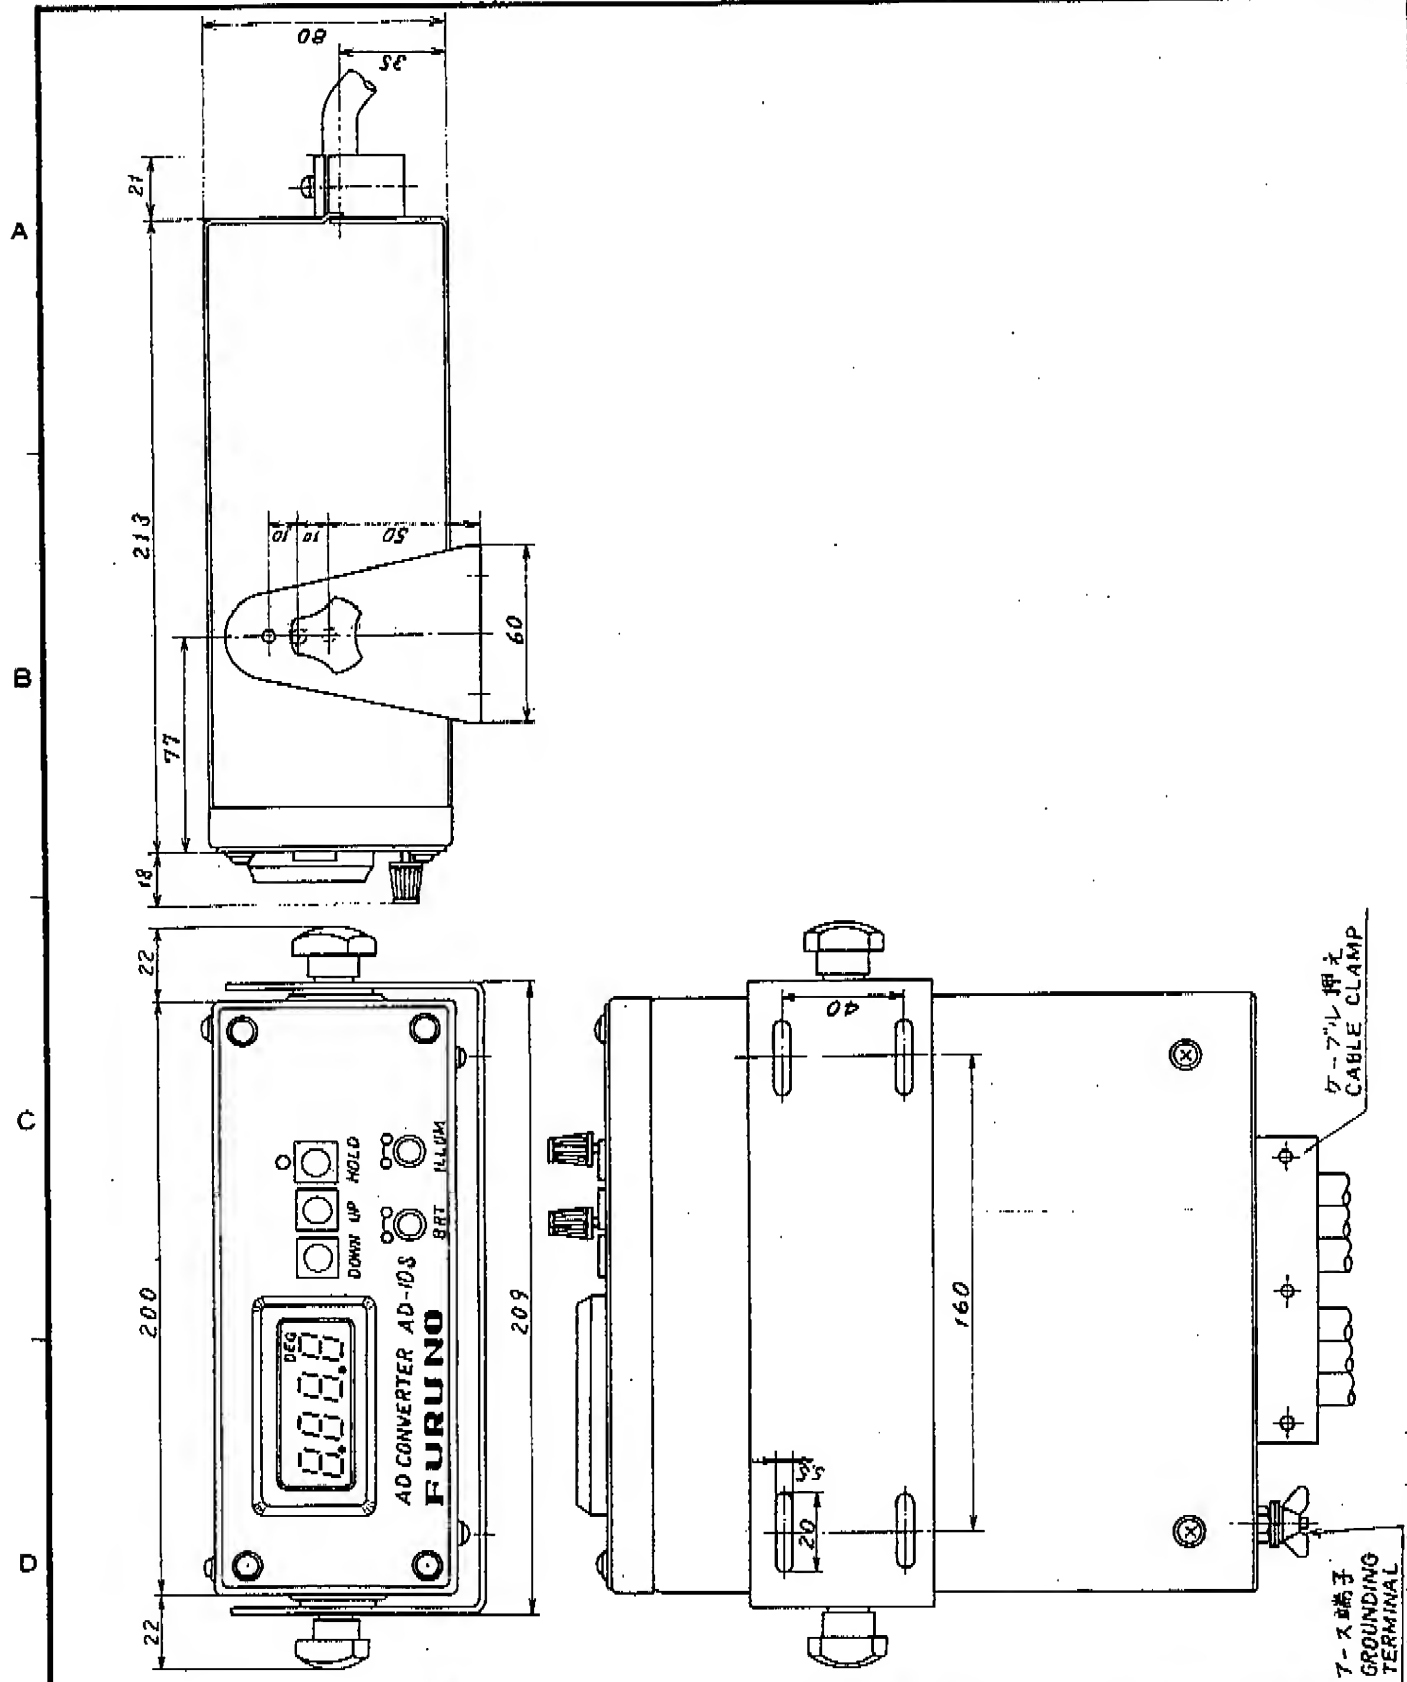

品番 ITEM	品名 NAME	材質 MATERIAL	数量 Q'TY	図番 DWG.NO.	備考 REMARKS
------------	------------	----------------	------------	---------------	---------------

承認 APPROVED	MAY. 16. 2000	三角法 THIRD ANGLE PROJECTION	名称 TITLE	A-D コンバータ寸法図 AD-10S A-D CONVERTER	
検査 CHECKED	MAY. 16. 2000	尺度 SCALE	1/2.5		